


AIR SUSPENSION SPEAKER REPLACEMENT


Speaker replacement is accomplished from the FRONT of the cabinet only. Access to the speakers is provided when the front Grille Assembly is removed. Pry outward at the sides and pull away from the cabinet.

BE CAREFUL WHEN REMOVING GRILLE FROM CABINET.

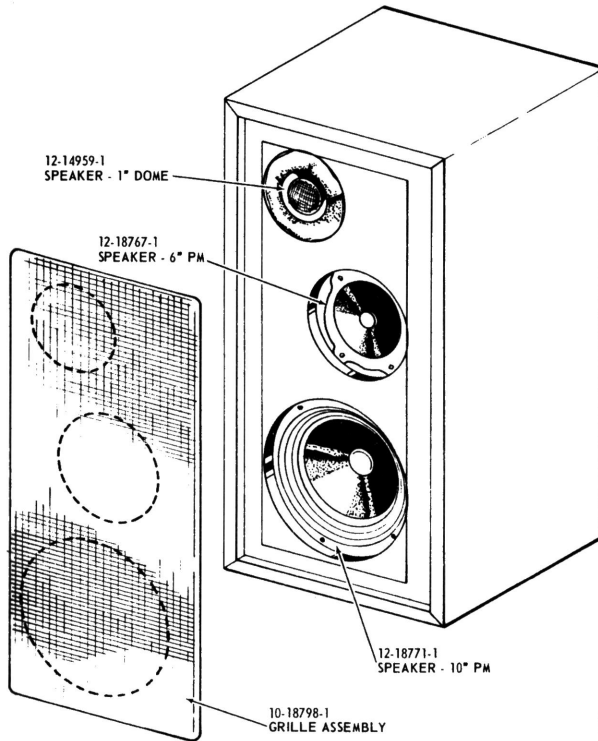

REPLACEMENT PARTS

DESCRIPTION	SERVICE PART NO.
Cabinet - Walnut	10-18797-1
Cabinet - Grille Assembly	10-18798-1
Capacitor - 2 MFD - 25V	41-14304-2
Capacitor - 5 MFD - 25V	41-14304-3
Choke - Inductance -.25 MH	56-14305-1
Speaker Cord	73-14921-2
Speaker Jack	73-14854-1
- Nut	73-14854-2
- Lug	73-14854-3
- Washer	73-14854-4
- Eyelet (Jack Mtg.)	70-14635-2
Speaker - 1" Dome	12-14959-1
- 6" PM	12-18767-1
- 10" PM	12-18771-1

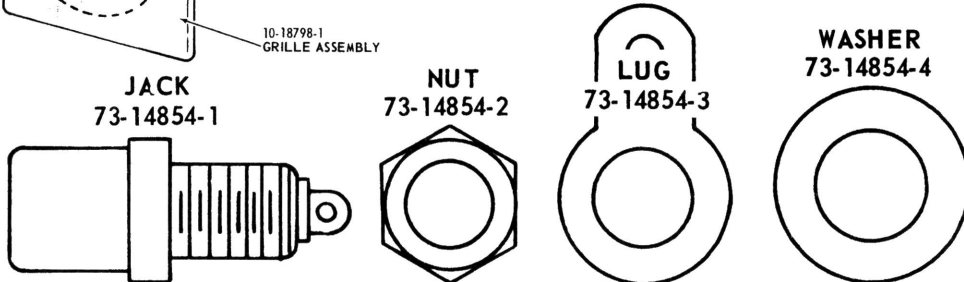

SCHMATIC DIAGRAM

