


AIR SUSPENSION SPEAKER REPLACEMENT

Speaker replacement is accomplished from the FRONT of the cabinet only. Access to the speakers is provided when the front Grille Assembly is removed. Pry outward at the sides and pull away from the cabinet.

BE CAREFUL WHEN REMOVING GRILLE FROM CABINET.

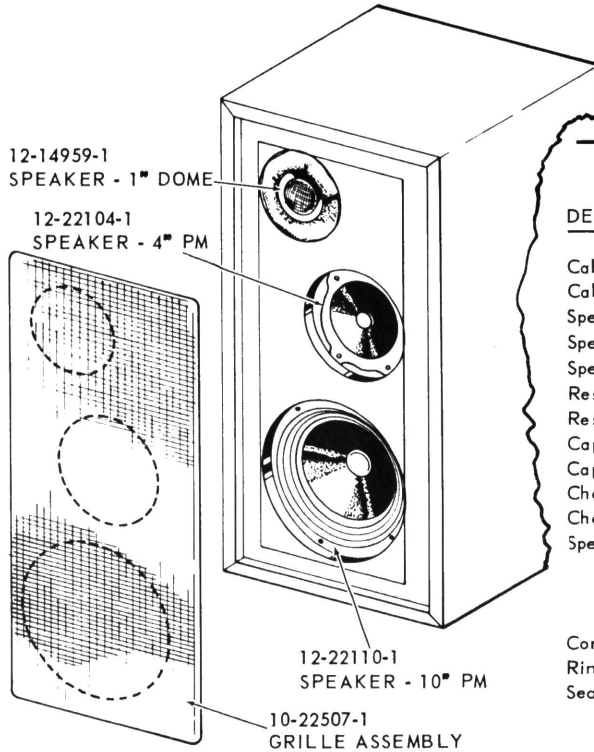

REPLACEMENT PARTS

DESCRIPTION	SERVICE PART NO.
Cabinet - Walnut	10-22506-1
Cabinet - Grille Assembly	10-22507-1
Speaker - 1" Dome	12-14959-1
Speaker - 4" PM	12-22104-1
Speaker - 10" PM	12-22110-1
Resistor - 6.8 OHM - 5 Watt	36-62454-21
Resistor - 12 OHM - 5 Watt	36-62454-27
Capacitor - 1 MFD - 25 VNP	41-14304-1
Capacitor - 10 MFD - 25 VNP	41-14304-4
Choke - Crossover - .25 MH	56-14305-1
Choke - Crossover - .85 MH	56-14305-2
Speaker - Jack	73-14854-1
- Nut	73-14854-2
- Lug	73-14854-3
- Washer	73-14854-4
Cord Speaker	73-14921-2
Ring - Speaker Mounting	85-22513-1
Seal - Dust	86-88013-10

SCHEMATIC DIAGRAM

