

This Supplement introduces the AS30 Air Suspension Speaker System which is used with Model CS30.


REMOVAL OF GRILLE ASSEMBLY AND SPEAKERS

Speaker replacement is accomplished from the FRONT of the cabinet only. Access to the speakers is provided when the front grille assembly is removed.


The grille is held in place by two (2) fasteners at the Lattom and by a groove at the top. Insert a screw driver or other suitable instrument through the $3/4^{\bullet}$ access hole in the bottom of the cabinet in back of the front rail and force the bottom of the grille assembly forward (away from the front of the cabinet) for grille removal.

Remove screws from speaker and lift from housing. Disconnect leads from speaker. Be sure to observe correct phasing when installing speakers. Original Mortite may be reused for airtight mounting.

Replace grille in original position by locating tongue at top of grille in proper groove in cabinet and then pushing bottom of grille in place.

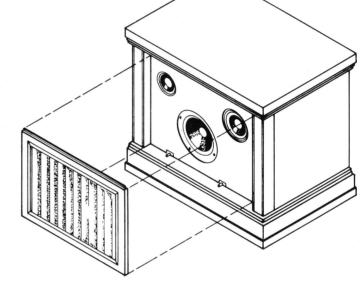

SUPPLEMENT 3 TO BULLETIN R18-1,-3,-12

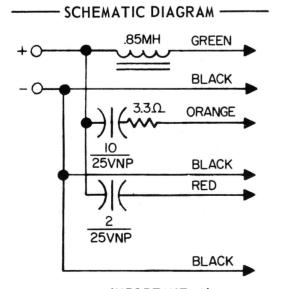

The AS30 is a furniture style "air suspension" sealed speaker system incorporating a high compliance 10" bass driver, a 6" high compliance closed back midrange and a wide dispersion 3" tweeter.

PERFORMANCE:

Nominal System Impedance Recommended Amplifier Power Minimum Power – small room – large room	8 ohms 40W - IHF 10W - IHF 20W - IHF
Frequency Response	35 - 20kHz±3db 25 - 25kHz±6db
System Resonance	45Hz
Enclosure Volume	4810 cu. in.
Crossover Frequencies - Tweeter	9kHz
- Midrange	$1.5 \mathrm{kHz}$

IMPORTANT: Always use genuine Sylvania replacement parts and tubes.

CAUTION - Any attempt to pull the bottom rail of the speaker grille away from the cabinet from the front will damage the curtain.

